

SIDE RODS (2)

29 1/2 IN. - 42 IN. (74,93 CM - 106,68 CM)



OPTION FOR SIDES (2)

18 IN. - 29 1/2 IN. (45,72 CM - 74,93 CM)




CENTER ROD (1)

36 IN. - 63 IN. (91,44 CM - 160,02 CM)



BRACKETS:

LEFT AND RIGHT




SUPPORTS (2)



THREADER (3)



SCREWS (4)

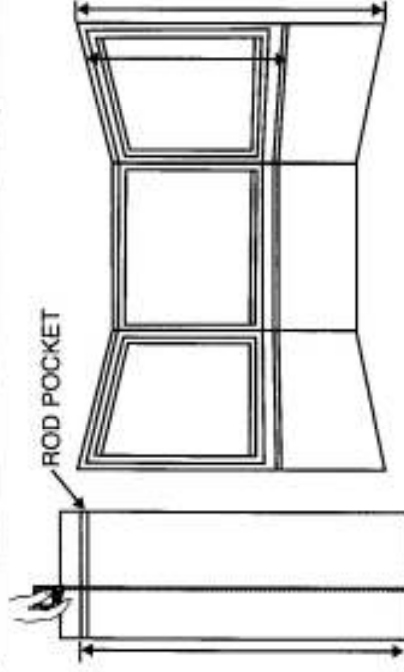


ROD POCKET


Lay panel flat. Measure length from bottom hem to top of rod pocket.

Write measurement here. _____

Using this figure, measure up from where you want the hem to be. Mark wall or frame with pencil.

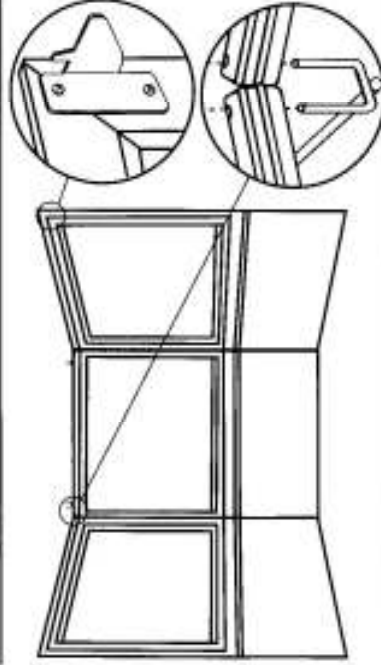

Mount brackets. Top bracket hole must line up with mark made in Step 2. Drill pilot holes with a 9/64 in. drill bit to install wire screws. Support wire screws must line up with bottom hole on end brackets.

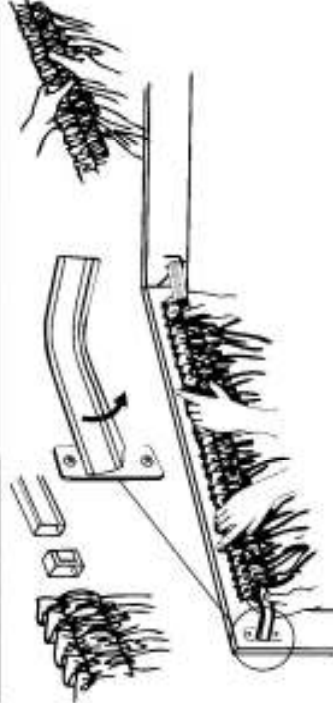

Put threader over end of larger rod section. Slip curtains over rod. Hold rod vertically when shirring curtains to avoid the rod from bending.

Put top hole of left end rod over prong on bracket. Swing rod down and snap on prong. Carefully put rods on support arms. Gently extend rod and attach to bracket at right end. Two people should mount rods over 36 in. (91,44 cm).