#### HOW TO MEASURE: CELLULAR SHADES

Please use a steel tape measure to ensure the proper measurements. Measure to the nearest eighth of an inch (1/8").


Measure each window individually even if they look the same.

Always measure and record the width first, then height.


Reversing the width measurement for the height


measurement is the most common ordering mistake.





### **Inside Mount**

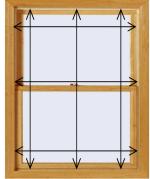

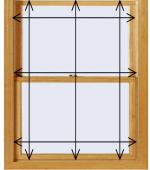



- Step 1. Measure the width of the opening at the top, middle, and bottom of window. Record the narrowest of the 3 measurements. This is your ordering width. The factory will make the necessary deductions to ensure a proper fit. DO NOT TAKE A DEDUCTION.
- Step 2. Measure the height of the opening on the left, center, and right. Record the longest of the 3 measurements. This is your ordering height.

Please note: Inside mount measurements represent the exact window opening, do not add to or subtract from your measurements.

Factory deductions:

All shade types except Cordless & Cordless Top Down - 3/8" from rail width and 1/2" fabric width. Cordless and Cordless Top Down - 1/4" from rail width and 3/8" from fabric width.

### Minimum Depth


You'll need this much unobstructed depth, including cranks, handles, locks, etc., to inside mount this treatment.

#### **Flush Mount**

For the face of your treatment to be flush with the wall or window frame, your frame depth must be the same or greater than the Flush Mount depth required.

|                             | Minimum Depth Required |               | Flush Mount |               |
|-----------------------------|------------------------|---------------|-------------|---------------|
| Shade Type                  | 3/8" & 1/2"            | 3/4" single & | 3/8" & 1/2" | 3/4" single & |
|                             | single cell            | double cell   | single cell | double cell   |
| Standard Shade              |                        |               |             |               |
| Arch, Half Arch, Eyebrow    |                        |               |             |               |
| Angle                       | 1"                     | 1 3/8"        | 1 9/16"     | 2 7/16"       |
| Day-Night Shade             |                        |               |             |               |
| Top Down/Bottom Up          |                        |               |             |               |
| Skylight Shade              | 1 1/4"                 | 1 5/8"        | 1 5/8"      | 2 3/8"        |
| Cordless / Cordless TopDown |                        |               |             |               |
| Smooth Lift Continuous Cord | 3/4"                   | 3/4"          | 2 1/4"      | 2 1/4"        |
| Motorized Shades            |                        |               |             |               |

## **Outside Mount**

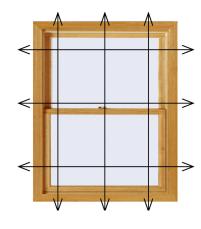

- Step 1. Measure the width of the area you wish to cover. Measure in 3 places across the top, center and bottom of the window. Record the largest of the 3 measurements. We recommend adding overlap to reduce light leakage around the blind. See *Recommended Overlap*. This is your ordering width.
- Step 2. Decide if the headrail will be installed on or above the window molding. You will need a flat surface area. Measure the height of the area you wish to cover. This is your ordering height.

Please note: Outside mount measurements represent the exact blind size. PROVIDE EXACT DIMENSIONS. Factory deductions: 1/8" from fabric width only.

| Shade Type                                 | OB Mounting<br>Surface Required | Recommended<br>Overlap - Width | Recommended<br>Overlap - Height |
|--|---------------------------------|--------------------------------|---------------------------------|
| Standard Shade<br>Arch, Half Arch, Eyebrow |                                 |                                |                                 |
| Angle                                      | 3/4"                            | 1 1/2" each side               | 1 1/2" above                    |
| Day-Night Shade                            |                                 |                                |                                 |
| Top Down/Bottom Up                         |                                 |                                |                                 |
| Skylight Shade                             | 3/4" above and below            | 1 1/2" each side               | 1 1/2" above and below          |
| Cordless / Cordless TopDown                |                                 |                                |                                 |
| Smooth Lift Continuous Cord                | 3/4"                            | 1 1/2" each side               | 2" above                        |
| Motorized Shades                           |                                 |                                |                                 |

# **Product Stacking Considerations**

The chart shows approximately how much of your window area will be covered when your window treatment is fully drawn open. If you feel too much of the window will be covered, consider Outside Mount. If space allows, mounting brackets can be raised higher above the window frame to reduce the area covered by the treatment.



### Stacking Chart

| Cellular Shades |   |  |  |  |
|-----------------|---|--|--|--|
| 48"             | 72"   | 84"  | 120"   |  |
| Height          | Height  | Height   | Height   |  |
| 1 3/8"          | 1 7/8"  | 2 1/8"   | 2 7/8"   |  |
| 1 3/8"          | 1 5/8"  | 1 7/8"   | 2 1/4"   |  |
| 2 3/8"          | 2 7/8"  | 3 1/8"   | 3 5/8"   |  |
| 2 1/4"          | 2 3/4"  | 3"   | 3 3/4"   |  |
| 1 5/8"          | 1 7/8"  | 2 1/4"   | 2 3/4"   |  |
| 2 1/2"          | 3 1/4"  | 3 3/4"   | 4 3/4"   |  |
| 2 1/2"          | 3 1/4"  | 3 3/4"   | 4 3/4"   |  |
| 2 3/4"          | 3 7/8"  | 4 3/8"   | 5 3/8'   |  |
| 2 3/8"          | 3 1/8"  | 3 1/2"   | 4 1/4"   |  |
| 2 3/8"          | 3 1/8"  | 3 1/2"   | 4 1/4"   |  |
| 2"              | 2 1/4"  | 2 1/2"   | 3"   |  |
| 3 1/8"          | 4 1/4"  | 4 3/4"   | 5 3/4"   |  |
|                 | 48"<br>Height<br>1 3/8"<br>2 3/8"<br>2 1/4"<br>1 5/8"<br>2 1/2"<br>2 1/2"<br>2 3/4"<br>2 3/8"<br>2 3/8"<br>2 3/8"<br>3 1/8" | 48"         72"           Height         Height           1 3/8"         1 7/8"           1 3/8"         1 5/8"           2 3/8"         2 7/8"           2 1/4"         2 3/4"           1 5/8"         1 7/8"           2 1/2"         3 1/4"           2 1/2"         3 1/4"           2 3/4"         3 7/8"           2 3/8"         3 1/8"           2 3/8"         3 1/8"           2 1/4"         3 1/8"           4 1/4" | 48"         72"         84"           Height         Height         Height           1 3/8"         1 7/8"         2 1/8"           1 3/8"         1 5/8"         1 7/8"           2 3/8"         2 7/8"         3 1/8"           2 1/4"         2 3/4"         3"           1 5/8"         1 7/8"         2 1/4"           2 1/2"         3 1/4"         3 3/4"           2 1/2"         3 1/4"         3 3/4"           2 3/4"         3 7/8"         4 3/8"           2 3/8"         3 1/8"         3 1/2"           2"         2 1/4"         2 1/2" |  |

| Top Down/Bottom | Up add 1/2" to | stack height |
|-----------------|----------------|--------------|

| Cordless, Motorized, Continuous Cord Shades |   |   |  |
|---|---|---|--|
| 48"   | 72"   | 84"   | 96"  |
| Height                                      | Height  | Height  | Height   |
| 2 3/8"                                      | 2 7/8"  | 3 1/8"  | 3 5/8"   |
| 2 3/8"                                      | 2 5/8"  | 2 7/8"  | 3"   |
| 3 3/8"                                      | 3 7/8"  | 4 1/8"  | 4 3/8"   |
| 3 1/4"                                      | 3 3/4"  | 4"  | 4 3/8"   |
| 2 5/8"                                      | 2 7/8"  | 3 1/4"  | 3 1/2"   |
| 3 1/2"                                      | 4 1/4"  | 4 3/4"  | 5 1/4"   |
| 3 1/2"                                      | 4 1/4"  | 4 3/4"  | 5 1/4"   |
| 3 3/4"                                      | 4 7/8"  | 5 3/8"  | 5 7/8"   |
| 3 3/8"                                      | 4 1/8"  | 4 1/2"  | 4 7/8"   |
| 3 3/8"                                      | 4 1/8"  | 4 1/2"  | 4 7/8"   |
| 3"  | 3 1/4"  | 3 1/2"  | 3 3/4"   |
| 4 1/8"                                      | 5 1/4"  | 5 3/4"  | 6 1/4"   |
|   | 48"<br>Height<br>2 3/8"<br>2 3/8"<br>3 3/8"<br>3 1/4"<br>2 5/8"<br>3 1/2"<br>3 1/2"<br>3 3/4"<br>3 3/8"<br>3 3/8" | 48" 72" Height Height 2 3/8" 2 7/8" 2 3/8" 2 5/8" 3 3/8" 3 7/8" 3 1/4" 3 3/4" 2 5/8" 2 7/8" 3 1/2" 4 1/4" 3 1/2" 4 1/4" 3 3/4" 4 7/8" 3 3/8" 4 1/8" 3 3/8" 4 1/8" 3 3/8" 3 1/4" | 48"         72"         84"           Height         Height         Height           2 3/8"         2 7/8"         3 1/8"           2 3/8"         2 5/8"         2 7/8"           3 3/8"         3 7/8"         4 1/8"           3 1/4"         3 3/4"         4"           2 5/8"         2 7/8"         3 1/4"           3 1/2"         4 1/4"         4 3/4"           3 1/2"         4 1/4"         4 3/4"           3 3/4"         4 7/8"         5 3/8"           3 3/8"         4 1/8"         4 1/2"           3"         3 1/4"         3 1/2" |

Cordless Top Down/Bottom Up add 5/8" to stack height.